Helvar

3021 Active+ Sense

The Active+ Sense is a small luminaire-based sensor that combines a light sensor for constant light control and a passive infrared movement detector

This sensor can be used on the self-learning smart wireless lighting control solution ActiveAhead as well as on intelligent luminaire control solution Active+.


The Active+ Sence plugs into an ActiveAhead Control Unit or in the Active+ usage to an Active+ LED driver.

If the sensor is connected to non-SELV control gear, the luminaire must be Class I.

Key Features


- Small and inconspicuous, it does not change the appearance of the luminaire.
- Provided with mounting features that can be snapped into sheet metal: two on each long side, and two on the rear.
- Part of the ActiveAhead self-learning wireless lighting control solution.

Light Sensor - For constant light functions

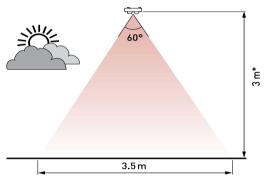


* Max recommended height 3 m

Presence Detector - Passive infrared (PIR)

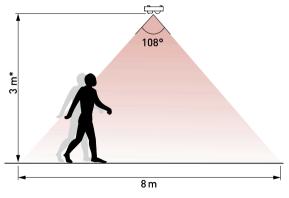


* Max recommended height 4 m

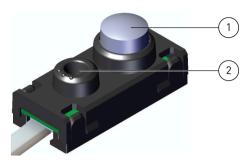


PIR sensor
Light sensor

Mounting Features

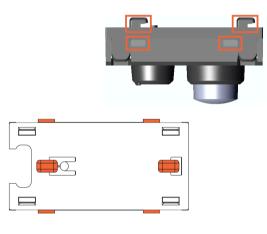

Detection pattern at floor level for 2.5 meters mounting height

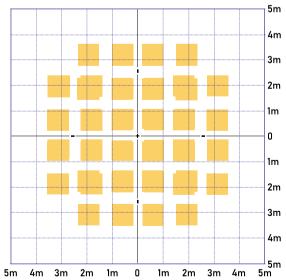




Technical Data


Connections	
ActiveAhead / Active+:	Flexible cable terminated with a fourway, 2 mm keyed connector
	Note: If the sensor is connec- ted to nonSELV control gear, the luminaire must be Class I.
Mechanical data	
Dimensions:	50 mm × 20 mm × 10 mm
Weight:	12 g
IP rating:	IP20
Cable information	
Order Code: 302101	Length: 80 cm, Colour: White

Operating and storage conditions		
Ambient temperature:	-20 °C to +50 °C	
	Note: The temperature difference between the detection target and the background must be at least 4 °C.	
Relative humidity:	Max. 85 %, non-condensing	
Storage temperature:	-20 °C to +70 °C	
Illuminance:	5 lx to 5000 lx	


Conformity and standards	
Conformity:	C € ĽÅ
EMC emission:	EN 55015
EMC immunity:	EN 61547
Safety:	EN 61347-2-11
Environment:	Complies with RoHS directive.

 
Connection

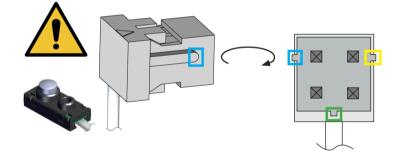




Dimensions (mm)

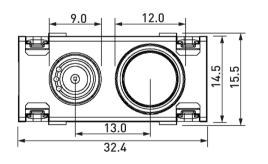

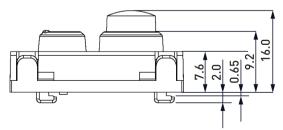

Mounting

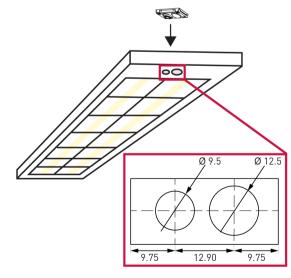



Note: Sensor holders are available to be used with the Active+ Sense:

5691 - ActiveAhead Sense Rectangular Sensor holder 5692 - ActiveAhead Sense Circular Sensor holder