


PIR Sensor (320, 320B, 320D2, 320BD2)
Multisensor (321, 321B, 321D2, 321BD2)




Installation Guide


2a

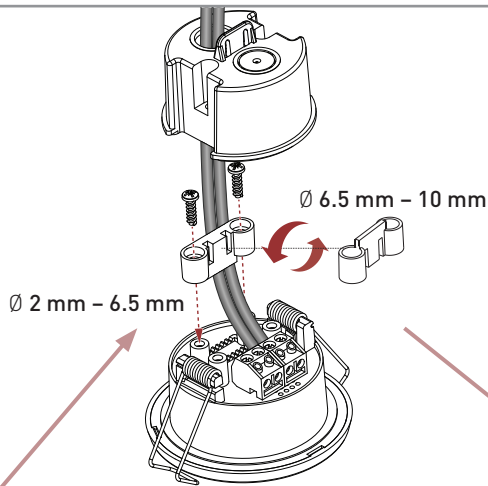

3

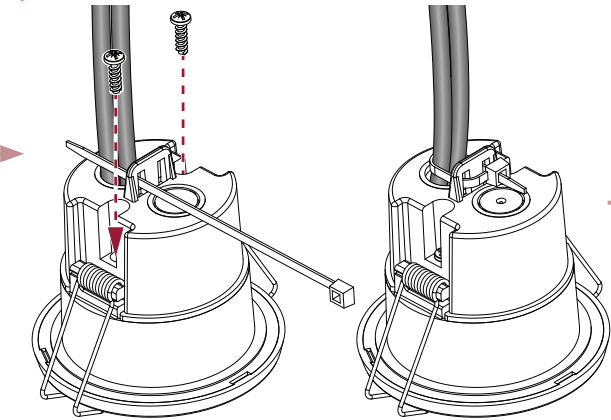

4

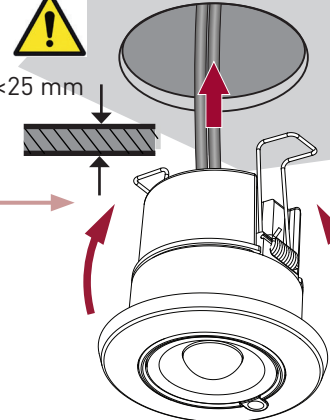


Helvar Oy Ab
Keilaranta 5, 02150, Espoo, Finland
www.helvar.com
+358 9 5654 1


Helvar Ltd
Hawley Mill, Hawley Road,
Dartford, Kent, UK
DA2 7SY
www.helvar.com
+44 (0) 1322 617200

7860373 Iss 11
2026-01-29

I.

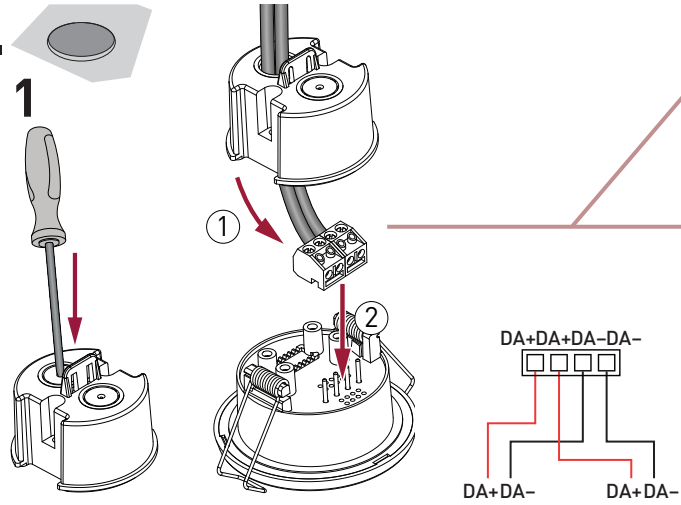


2b

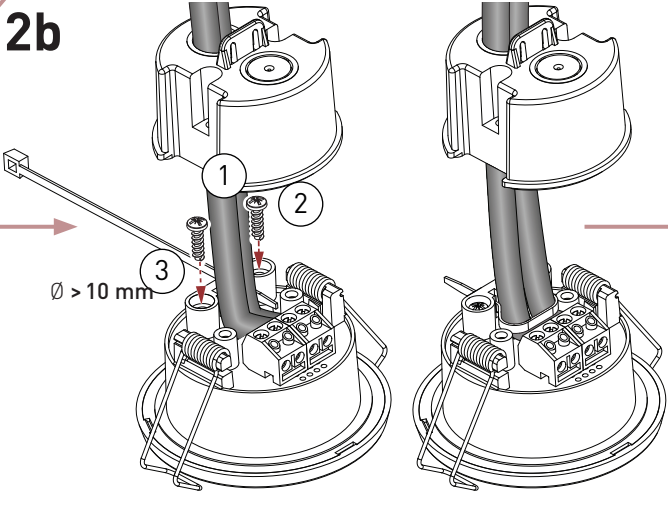


II. SBB-E


1

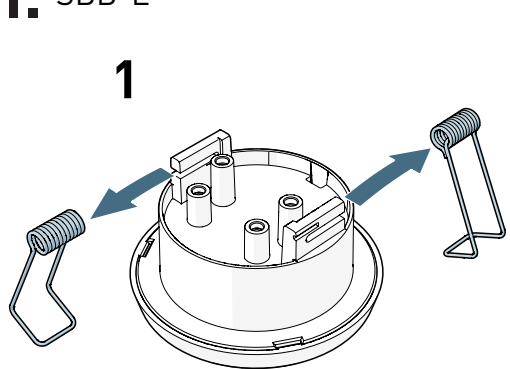


2

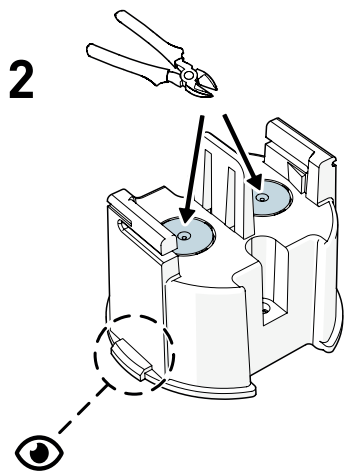


3

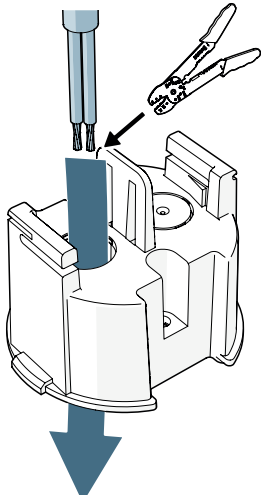


4

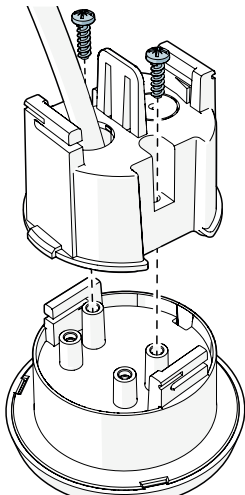


5

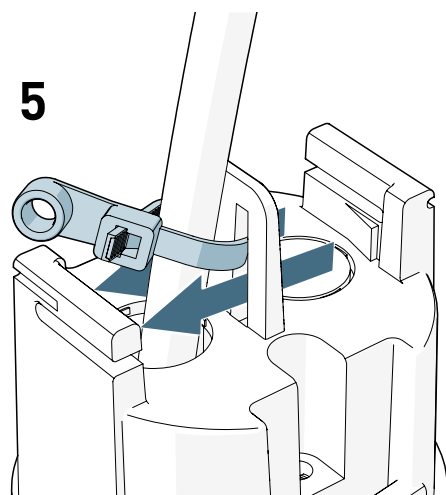




6

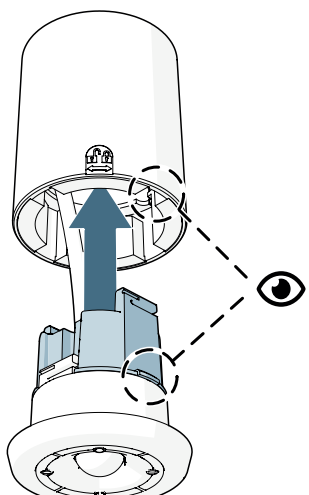

7

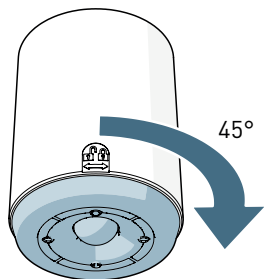

8

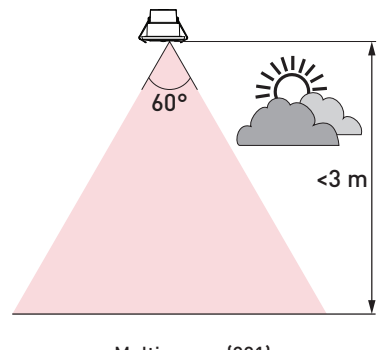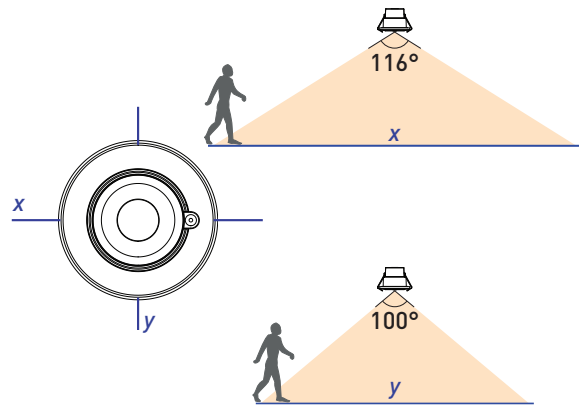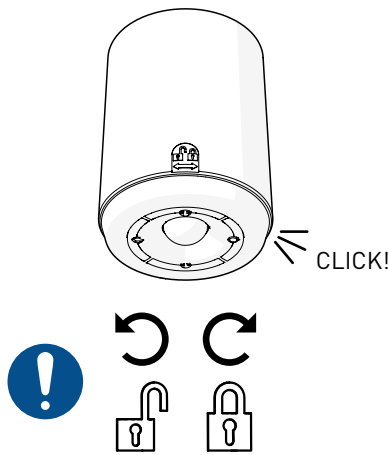

Multisensor (321)

- FI** Liiketunnistin (320, 320B, 320D2, 320BD2) & Multisensori (321, 321B, 321D2, 321BD2) Asennusohje
- SV** PIR Sensor (320, 320B, 320D2, 320BD2) & Multisensor(321, 321B, 321D2, 321BD2) Monteringsanvisning
- IT** Sensore PIR (320, 320B, 320D2, 320BD2) & Multisensore(321, 321B, 321D2, 321BD2) Guida all'installazione
- PL** PIR Sensor (320, 320B, 320D2, 320BD2) & Multisensor(321, 321B, 321D2, 321BD2) Instrukcja montażu
- FR** PIR-Sensor (320, 320B, 320D2, 320BD2) & Multi-capteur (321, 321B, 321D2, 321BD2) Guide d'installation

