

**PIR Sensor (320, 320B, 320D2, 320BD2)  
Multisensor (321, 321B, 321D2, 321BD2)**













**Installation Guide**



Helvar Oy Ab  
Keilaranta 5, 02150, Espoo, Finland  
www.helvar.com  
+358 9 5654 1

Helvar Ltd  
Hawley Mill, Hawley Road,  
Dartford, Kent, UK  
DA2 7SY  
www.helvar.com  
+44 (0) 1322 617200

7860373 Iss 10  
2022-10-19

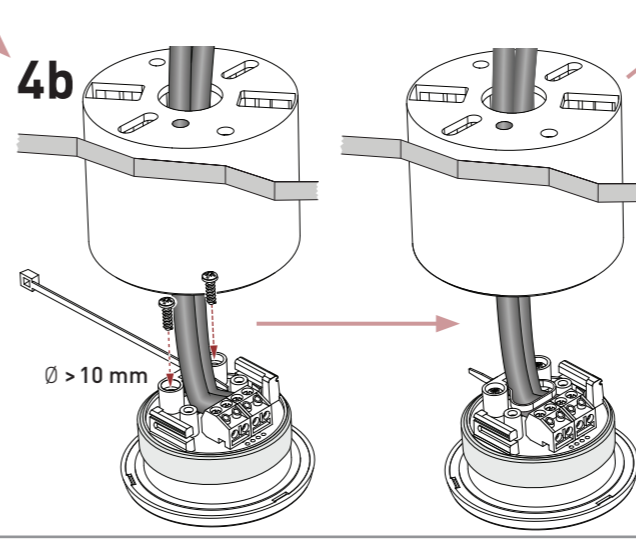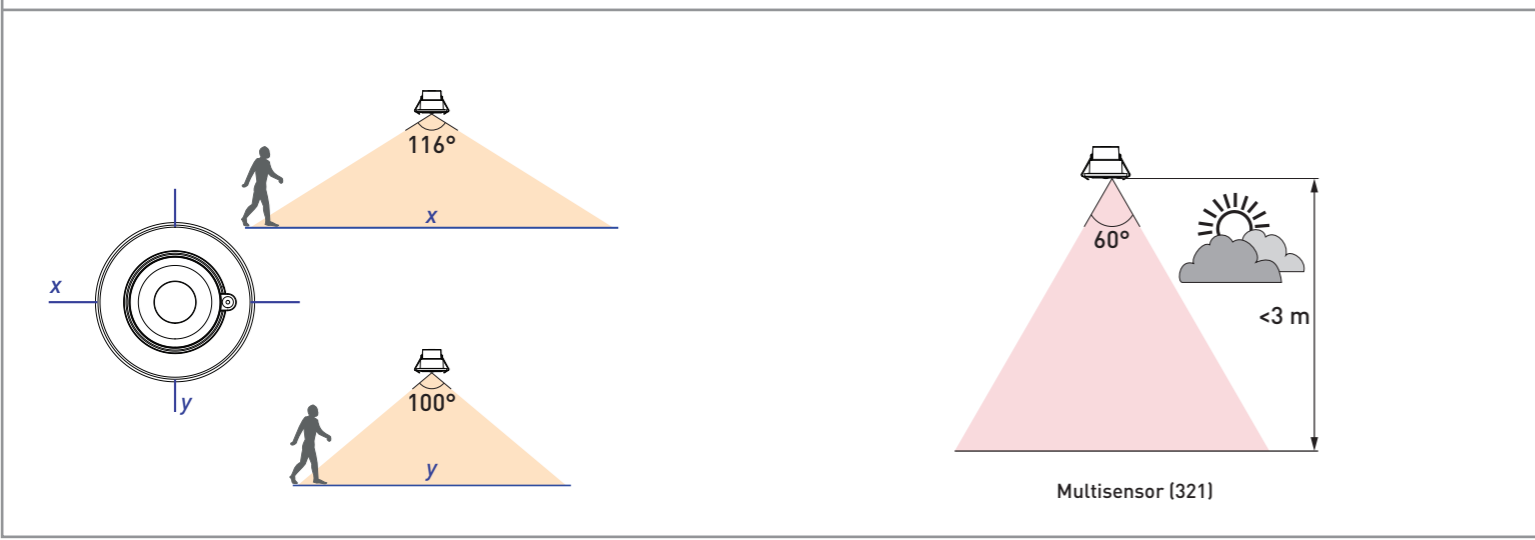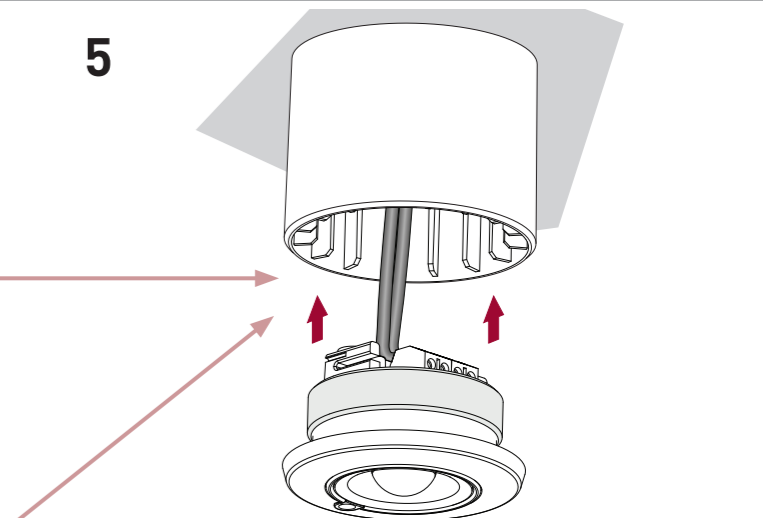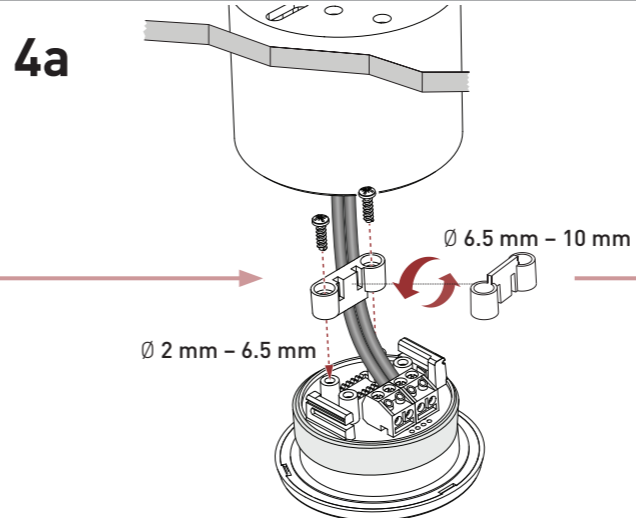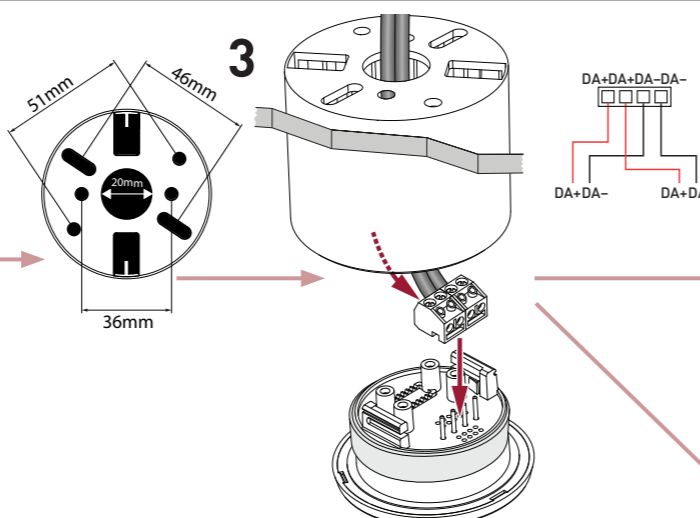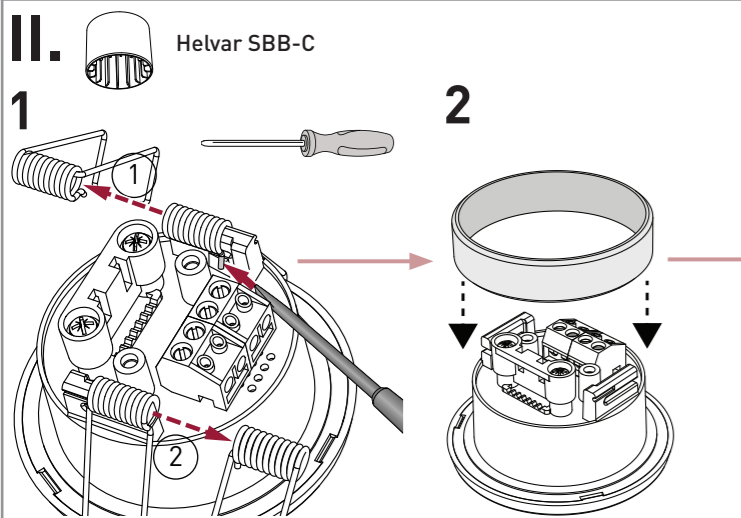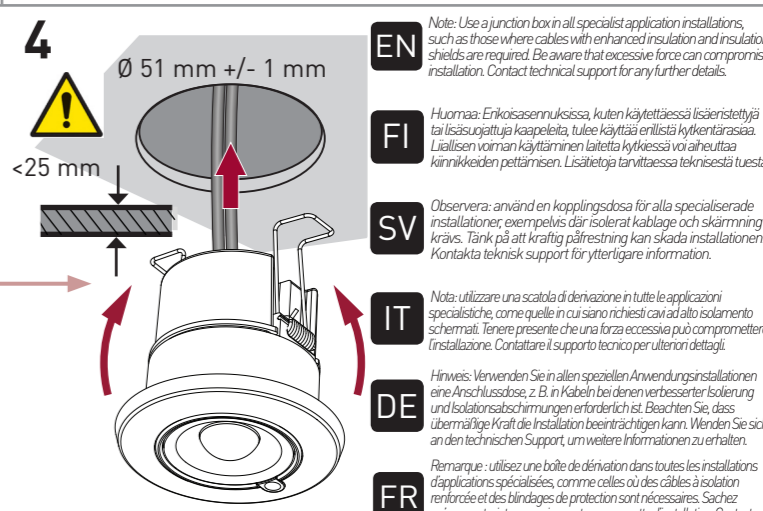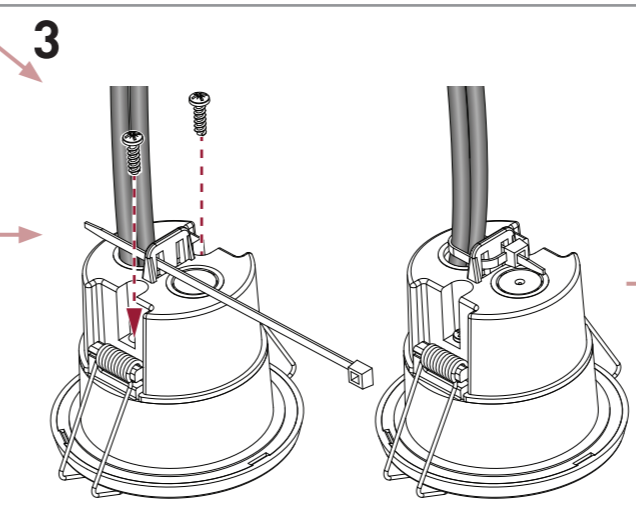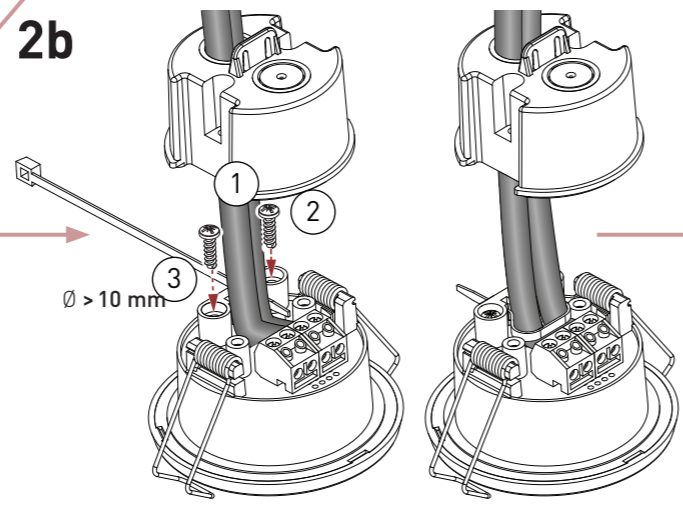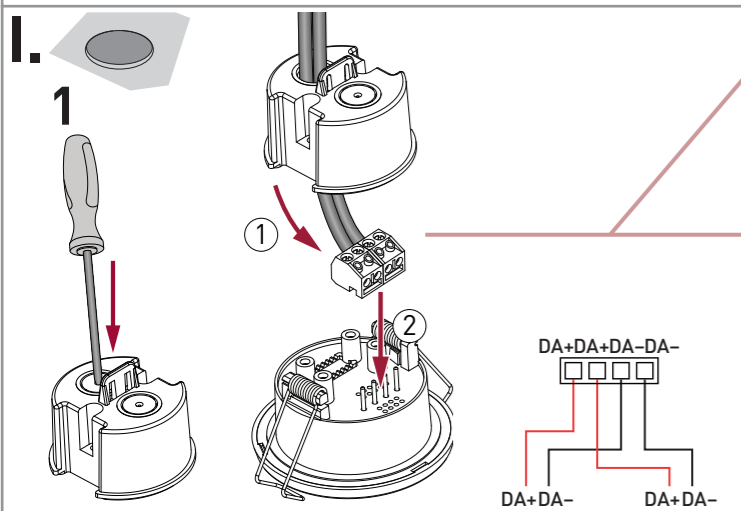

**FI** Liiketunnistin (320, 320B, 320D2, 320BD2) & Multisensori (321, 321B, 321D2, 321BD2) Asennusohje

**SV** PIR Sensor (320, 320B, 320D2, 320BD2) & Multisensor(321, 321B, 321D2, 321BD2) Monteringsanvisning

**IT** Sensore PIR (320, 320B, 320D2, 320BD2) & Multisensore(321, 321B, 321D2, 321BD2) Guida all'installazione

**DE** PIR Sensor (320, 320B, 320D2, 320BD2) & Multisensor(321, 321B, 321D2, 321BD2) Installationsanweisung

**FR** PIR-Sensor (320, 320B, 320D2, 320BD2) & Multi-capteur (321, 321B, 321D2, 321BD2) Guide d'installation

